

CHEERICO - Acrylic Round Maypole Cupcake Stand

Thank you for purchasing our acrylic product. Please follow the guide below to ensure your product is assembled correctly and avoid potential damage.

PLEASE NOTE: You must remove the protective cover before assembling this product.

ASSEMBLY GUIDE:

Parts: Acrylic plates, head screws, double screws, acrylic rods and acrylic feet.

1. Remove the protective cover from each acrylic component.
2. Begin by placing the feet to the underside of the bottom plate ensuring they are evenly spaced. Acrylic feet are **not** adhesive so any plate can be used as bottom tier.
3. Starting with the largest tier (the bottom one), place the acrylic disc on a clean flat surface.
The stand is not designed to move around once built so construct it in its final resting place. Do not attempt to move the stand once it has cakes on it.
4. Take a metal head screw and place it on to a flat surface where the stand is to be constructed.
5. Carefully line up the hole(s) of the largest plate with head screw ensuring the plate is resting securely on the acrylic feet.
6. Now screw the first rod onto the screw thread of head screw making sure the acrylic plate is clamped firmly between two acrylic rods.
7. Continue by placing the next largest plate on to the screw thread of rod and tighten each acrylic plate as you go.
8. The final rod is to be used as the support for the final tier and the stand is completed by adding the other head screw into the top.

CARE GUIDE:

- The stand is made from acrylic which will scratch if it is not looked after properly.
- To clean the product use warm water with a little washing-up liquid and soft cloth.
- Do not use any abrasive cleaning products.
- Do not put the stand in dishwasher.

If you have any questions, please contact us via contact@cheerico.com.

