

CHEERICO - Acrylic Square Maypole Cupcake Stand

Thank you for purchasing one of our acrylic products.

Please follow the guide below to ensure your product is assembled correctly and avoid potential damage.

PLEASE NOTE: You must remove the manufacturers' protective cover before assembling this product. This covering is clear bubble and cling wrap on both sides of every acrylic component.

ASSEMBLY GUIDE:

Parts: Acrylic discs, head screws, double screws, acrylic rods and acrylic feet.

1. Remove the manufacturer's protective cover from BOTH side of each acrylic component.
2. Begin by placing the feet to the underside of the bottom disc ensuring they are evenly spaced.
3. Take a metal head screw and place it on to a flat surface where the stand is to be constructed
4. Carefully line up the hole(s) of the largest disk with head screw ensuring the disc is resting securely on the acrylic feet.
5. Now screw the first rod onto the screw thread of the head screw making sure the acrylic disc is clamped firmly between two components.
6. Continue by placing the next largest disc on to the screw thread of rod and tighten each piece as you go.
7. The final rod is to be used as the supposed for the top tier and the stand is completed by adding the other screw cap into the top.

CARE GUIDE:

- The stand is made from acrylic which will scratch if it is not looked after properly.
- To clean the product use warm water with a little washing-up liquid and soft cloth.
- Do not use any abrasive cleaning products as they will make the acrylic.
- Do not put the stand in a dishwasher

If you have any questions, please contact us via contact@cupcakestand.com.au

